


# STEERING WHEEL CONTROL INTERFACE FOR VOLKSWAGEN VEHICLES

42xvw019-0

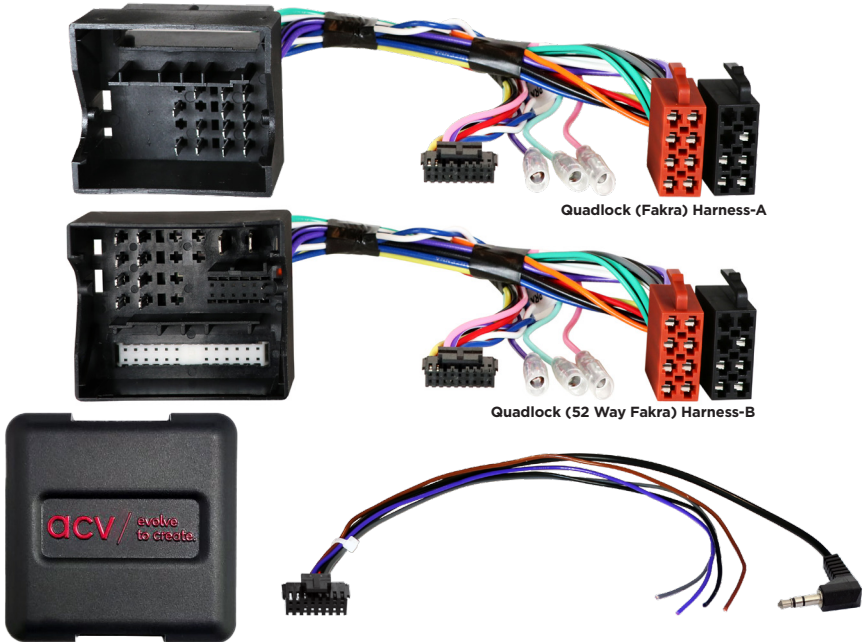

Quadlock (Fakra) Harness-A

Quadlock (52 Way Fakra) Harness-B

## INSTALLATION GUIDE

The 42xvw019-0 allows for the retention of the steering wheel controls as well as other vital features when installing an aftermarket unit into the vehicle. This interface features selectable dipswitches for dedicated applications, simply refer to the provided table for the correct configuration ensuring seamless integration.

### VEHICLE APPLICATION

#### VOLKSWAGEN

##### Harness-A - Quadlock (Fakra)

Amarok (2H)	2009-2016
EOS (1F)	2006-2015
Fusca (Brazil)	2005-2011
Golf (Mk5 and Mk6)	2003-2013
Jetta (A5, A6)	2005-2015
Magotan (Asia)	2005-2011
Polo (9N) (9N3) (6R)	2005-2014
Passat (B6, 3C) (B7, 3C36)	2005-2015
Scirocco	2008-2017
Suran	2009-2021
Sagitar (China)	2005-2011
Touareg	2006-2012
Tiguan (5N)	2007-2015
Touran	2003-2015
Transporter	2003-2015
UP! (VW120)	2011-2016
Vento (Mexico)	2005-2011

##### Harness-B - Quadlock (Fakra 52-Way)

Amarok (MIB-PQ)	2016-2021
Beetle (5C1)	2015-2019
Crafter	2017-2021
Caddy (2K/KN)	2015-2020
Grand California	2016-2019
Golf (mk7)	2012-2018
Jetta (A6)	2011-2018
Passat	2014-2020
Polo	2012-2017
Sharan 2 (7N)	2015-2021
Scirocco	2015-2017
Sportsvan	2014-2020
Tiguan (5N)	2012-2015

##### Harness-B - Quadlock (Fakra 52-Way) Continued...

Tiguan	2017-Up
Transporter T6 (7H)	2015-2019
Transporter T6.1	2019-Up
Touran	2015-2020

Vehicles with RCD200/300/310/500/510 | Audio10 (Amarok) Gamma/ Beta/MFD/MCD (Passat) or MIB-PQ System, Harness dependant.

Quadlock (Fakra) Harness-A or Quadlock (Fakra 52-Way) Harness-B

### KEY FEATURES

- RETAIN STEERING WHEEL CONTROL FUNCTIONALITY
- REPLACE FACTORY RADIO
- OUTPUTS FOR SPEED PULSE, PARK BRAKE & REVERSE
- SOFTWARE UPDATEABLE
- REMAPPABLE BUTTONS

### PRIOR TO INSTALLATION

Installation requires a certain level of technical knowledge. Prior to installation, it is important to read the manual. Select a location for installation that is dry and free from heat sources. It is essential to use the correct tools during installation to prevent any damage to the vehicle or the product itself. Please note that we cannot be held liable for any issues arising from improper installation.

Before proceeding with installation, disconnect the negative battery terminal and ensure the key is removed from the ignition.

# WIRING KEY

## ISO CONNECTOR WIRING KEY

**Purple** Right Rear Speaker +  
**Purple/Black** Right Rear Speaker -  
**Green** Left Rear Speaker +  
**Green/Black** Left Rear Speaker -

**Grey** Right Front Speaker +  
**Grey/Black** Right Front Speaker -  
**White** Left Front Speaker +  
**White/Black** Left Front Speaker -

**Yellow** Permanent 12V  
**Black** Ground  
**Red** Ignition 12V  
**Orange** Illumination

## FLYING WIRE WIRING KEY

**Pink** Speed Pulse - 0 to 12V Square Wave @ 1Hz/Kph  
**Green** Park Brake

**Purple/White** Reverse Gear - 250mA  
**Orange** Illumination - 250mA

## OUTPUTS & RATINGS

**Standby Current** <3mA

**Operating Voltage** 6V to 16V

**Operating Temperature** -20C to 85C

\*rated at 25 degrees Centigrade

# DIPSWITCH CONFIGURATION

 
MANUFACTURER	SYSTEM	DIPSWITCH CONFIGURATION				CONNECTION
		1	2	3	4	
RESERVED	NA	OFF	OFF	OFF	OFF	SOFTWARE UPDATE MODE
ALPINE	IR DATA	OFF	ON	OFF	OFF	MALE 3.5MM JACK
ANALOG SINGLE EXTEND	Analog	ON	ON	ON	ON	BROWN SWC IR
ANALOG SINGLE WIRE	Analog	ON	ON	ON	OFF	BROWN SWC IR
CLARION	IR DATA	ON	OFF	OFF	ON	MALE 3.5MM JACK
CUSTOM	IR DATA	ON	OFF	ON	OFF	HEAD UNIT DEPENDANT
GRUNDIG	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
JVC	IR DATA	OFF	OFF	ON	OFF	BROWN SWC IR
KENWOOD 1	IR DATA	ON	OFF	OFF	OFF	BROWN SWC IR
KENWOOD 2	IR DATA	ON	ON	OFF	OFF	BROWN SWC IR
KEY 1 / KEY 2	Analog	OFF	ON	ON	OFF	KEY1 / KEY 2 WIRES
KEY 1 / KEY 2 EXTEND	Analog	OFF	ON	ON	ON	KEY1 / KEY 2 WIRES
PHILIPS	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
PIONEER 1	Analog	OFF	OFF	OFF	ON	MALE 3.5MM JACK
PIONEER 2	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
SONY	Analog	ON	OFF	ON	ON	MALE 3.5MM JACK
ZENEC	IR DATA	ON	ON	OFF	ON	BROWN SWC IR

## DIPSWITCH 5 & 6


Dipswitch 5 & 6 are reserved for vehicle specific configuration.

<b>KEY1 and KEY2</b>	KEY1 and KEY2 are specifically tailored for analog learning mode-style radios. Our SWC module is designed with a resistor chain that precisely matches the required resistance for seamless compatibility with this type of head unit.
<b>KEY1 and KEY2 EXTEND</b>	This mode extends every button press to 2 seconds during the learning process. However, with rollly wheel-designed steering wheel buttons, holding for 2 seconds isn't feasible. Our KEY1 and KEY2 extend feature addresses this by automatically prolonging each press, simplifying head unit programming even in such scenarios. Extend mode is not intended for normal use, it is only used in the teaching process.
<b>ANALOG SINGLE WIRE and ANALOG SINGLE WIRE EXTEND</b>	This function operates similarly to KEY1 and KEY2 but transmits all unique values through the IR SWC single wire. This is crucial for compatibility with learning-style head units featuring only one learning input wire. To ensure compatibility, we've incorporated this feature into our steering wheel control interface, ensuring seamless operation across various head unit setups. The Analog Extend mode functions identically to its counterpart within the KEY1 and KEY2 system but transmits through a single wire.


# SWC INTERFACE




18 PIN HARNESS CONNECTOR

 

DIPSWITCHES

 

16-PIN HEAD UNIT CONNECTION LEAD

 

USB-C


# CONNECTION GUIDE

## BEFORE INSTALLATION

Prior to installing the interface, it is essential to remove and disconnect the factory stereo. For guidance on this process, please refer to the vehicle owner's manual/handbook or seek assistance from a professional.

## SETTING THE DIPSWITCHES


This interface includes a set of dipswitches. Consult the dipswitch selection guide to select the appropriate configuration. To activate a dipswitch, press it downward into the 'ON' position. Refer to the diagram for an example of the 'KENWOOD' dipswitch configuration.

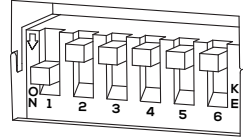

## INSTALLATION

1. Take the interface, then connect the 16-PIN head unit connection lead and the 18-PIN steering wheel harness connectors to their respective ports.
2. Connect the head unit connection lead to the steering wheel remote input on the rear side of the aftermarket stereo. Connection methods vary based on the stereo brand, utilising either a 3.5mm jack connector SWC IR wire or wired inputs KEY1 and KEY2. *For specific connection guidance, refer to your aftermarket stereo's installation manual if not clearly labelled on the stereo harness.*
3. Connect the power/speaker ISO connector from the interface to the corresponding power/speaker ISO connection on the aftermarket stereo. *For aftermarket stereos lacking an ISO connector, refer to the "Wiring Key" on Page 2 for guidance on connecting wires. Certain interfaces may also include extra "flying" wires for additional functionalities such as parking brake trigger, reverse gear, and speed pulse. Further information on these wires is available in the "Flying Wire Wiring Key" section.*
4. Connect the vehicle-specific connectors from the interface harness to the corresponding connectors on the vehicle harness.
5. Connect the flying wires on the harness to the rear of the stereo (if applicable).
6. Connect the antenna adapter to the vehicle's existing connection at the rear of the aftermarket stereo.
7. When installing an aftermarket reverse camera, connect the yellow RCA from the harness to the yellow RCA of the aftermarket camera. (If supported by the interface and vehicle)
8. When installing a DAB antenna, ensure to connect the DAB aerial connector to the rear of the new stereo.
9. After connecting all wires (along with any additional accessories), it's crucial to thoroughly test the stereo and steering wheel controls before reassembling the dashboard. If steering wheel controls are unresponsive, inspect connections and check dipswitch settings. Repeat the connection process if necessary, following the outlined steps.

## STEERING WHEEL CONTROL CONFIGURATION

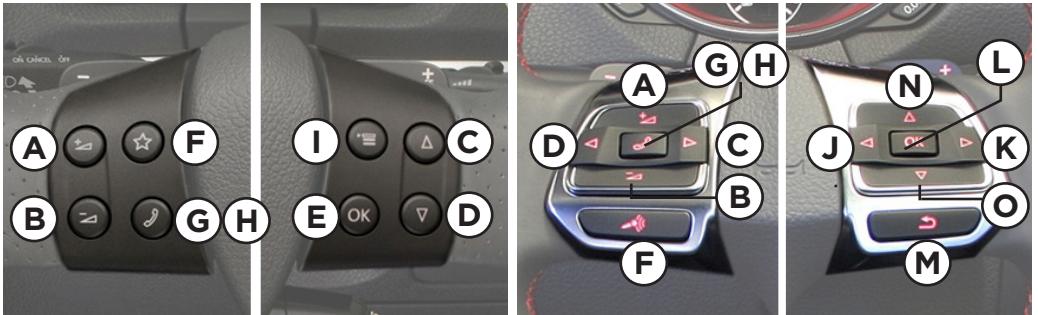

- |                      |                       |                       |                             |                             |
|----------------------|-----------------------|-----------------------|-----------------------------|-----------------------------|
| <b>A</b> Volume Up   | <b>D</b> Track Down   | <b>G</b> Pick Up      | <b>J</b> Vehicle Menu Left  | <b>M</b> Vehicle Menu Back  |
| <b>B</b> Volume Down | <b>E</b> Source       | <b>H</b> Hang Up      | <b>K</b> Vehicle Menu Right | <b>N</b> Preset/Folder Up   |
| <b>C</b> Track Up    | <b>F</b> Mute / Voice | <b>I</b> Vehicle Menu | <b>L</b> Vehicle Menu OK    | <b>O</b> Preset/Folder Down |

*The provided diagram, while meticulously researched, serves as an example only. Actual steering wheel control configurations may vary dependant on each vehicle.*

## BUTTON REMAPPING

The steering wheel buttons listed offer the flexibility of being re-configured or assigned dual functions. The availability of these buttons depends on the specific vehicle to which the interface is being installed and if the aftermarket stereo supports them.


In addition to button remapping, we offer the option to assign dual functions to each button on the steering wheel. This means that every button can be programmed to execute both a short press command and a long press command.

You can also add your own bespoke configuration. Button configuration can be done by PC, MAC and smart phone via the USB port.


Button Remapping instructions can be found in a separate guide on our website.

# CONNECTION DIAGRAM

HEAD UNIT CONNECTION LEAD

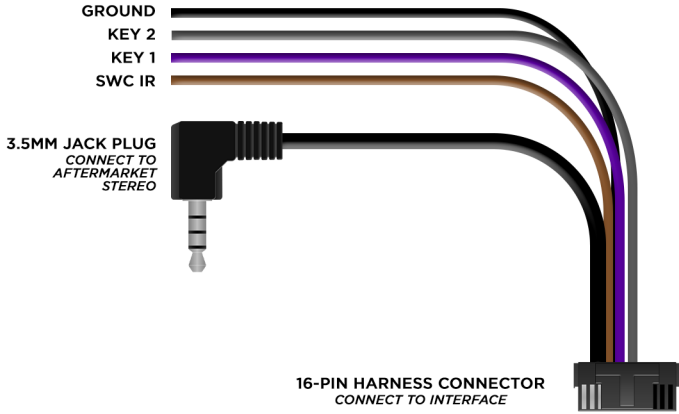

SWC INTERFACE

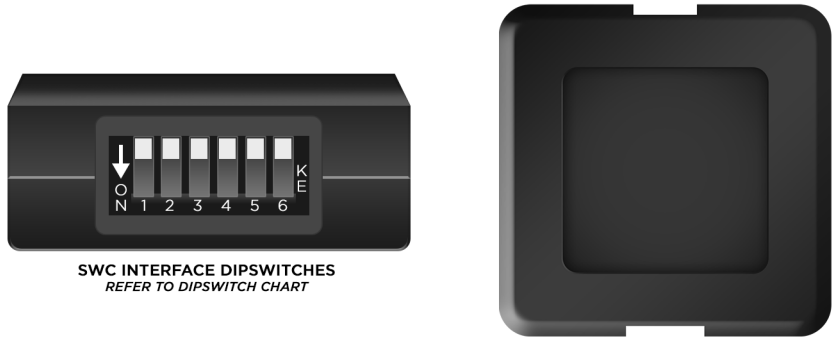

SWC VEHICLE HARNESS

