


Inbay® Einsatz für OEM-Ablagefach
Inbay® inlay for OEM pocket

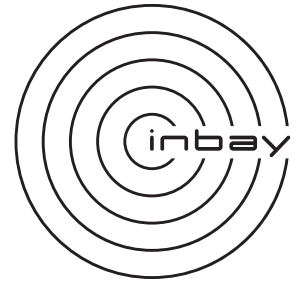

Part-no.: / Artikel-Nr.: 241320-51-1

D	EINBAUANLEITUNG (2 - 4)
GB	INSTALLATION INSTRUCTIONS (6 - 8)
E	INSTRUCCIONES DE MONTAJE
F	INSTRUCTIONS DE MONTAGE
I	ISTRUZIONI DI MONTAGGIO
P	INSTRUÇÕES DE MONTAGEM
NL	INBOUW-INSTRUCTIE
DK	MONTERINGSVEJLEDNING
N	MONTERINGSVEILEDNING
S	MONTERINGSANVISNING
SF	ASENNUSOHJE
CZ	CZ NÁVOD K MONTÁŽI
H	BESZERELÉSI UTASÍTÁS
PL	PL INSTRUKCJA ZABUDOWY
GR	Οδηγίες τοποθέτησης
RO	INSTRUCȚIUNI DE MONTAJ




Volkswagen Golf VII 2012->

Expert Fitment Required
Montage durch Fachwerkstatt erforderlich
Montaje sólo por el concesionario
Montage par spécialiste nécessaire
E' necessario in officina specializzata
Especialista em montagem requerido
Motage door vakman nodig
Montage ved professionelt værksted påkrævet
Nødvendig med montering fra fagvegværksted
Verkstadsmontage erfordras
Asennus tarpeen merkkikorjaamossa
Montáž ve specializované dílně nutná
A szereléshez szakmuhely kell
Konieczny montaż przez warsztat specjalistyczny
Να τοποθετεί απο συνεργείο
Montajul trebuie efectuat de un atelier de specialitate

Subject to alteration without notice
Technische Änderungen vorbehalten
Reservadas modificaciones técnicas
Sous réserve de modifications techniques
Con riserva di apportare modifiche tecniche
Reservamo nos o direito a alterações técnicas
Technische wijzigingen voorbehouden
Med forbehold for tekniske Ændringer
Tekniske forendringer forbeholdes
Med reservation för tekniska ändringar
Tekniset muutokset pidätetään
Technické zmeny vyhrazeny
A változtatások technika jogát fenntartjuk
Zmiany techniczne zastrzeżone
Επιφύλασσομεθα για αλλαγές
Ne rezervam dreptul la modificari tehnice




(1) Entfernen Sie die Blende (siehe Pfeile)

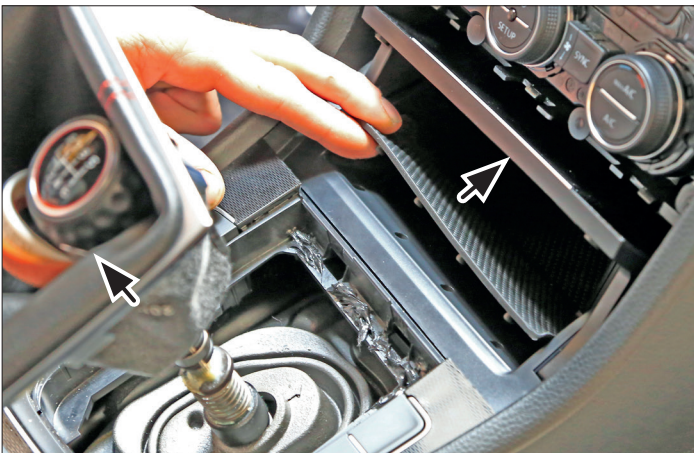

(2) Ziehen sie den Schaltsack über die Gangschaltung

(3) Entnehmen sie die OEM-Gummimatte

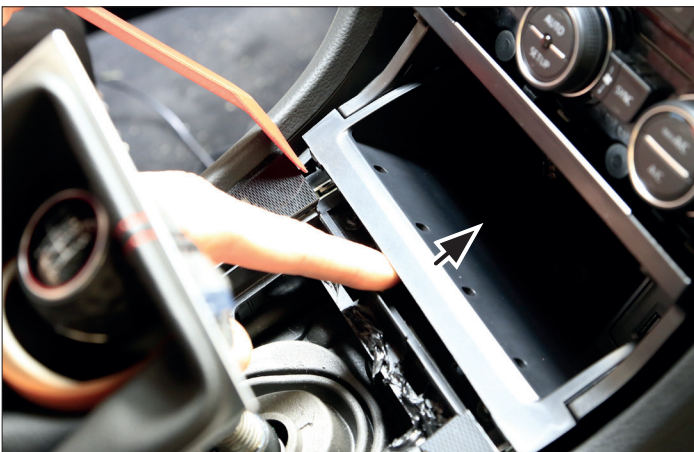

(4) Lösen sie das OEM Ablagefach und ziehen Sie dieses in ihre Richtung




(5) Lösen Sie vorsichtig alle Kabelverbindungen


(6) Entnehmen sie das OEM Ablagefach



- (7) Bohren sie ein Loch ($\varnothing = 10 \text{ mm}$) in die untere rechte Ecke des OEM Ablagefachs um später das Kabel für die Inbay® Stromversorgung durchführen zu können

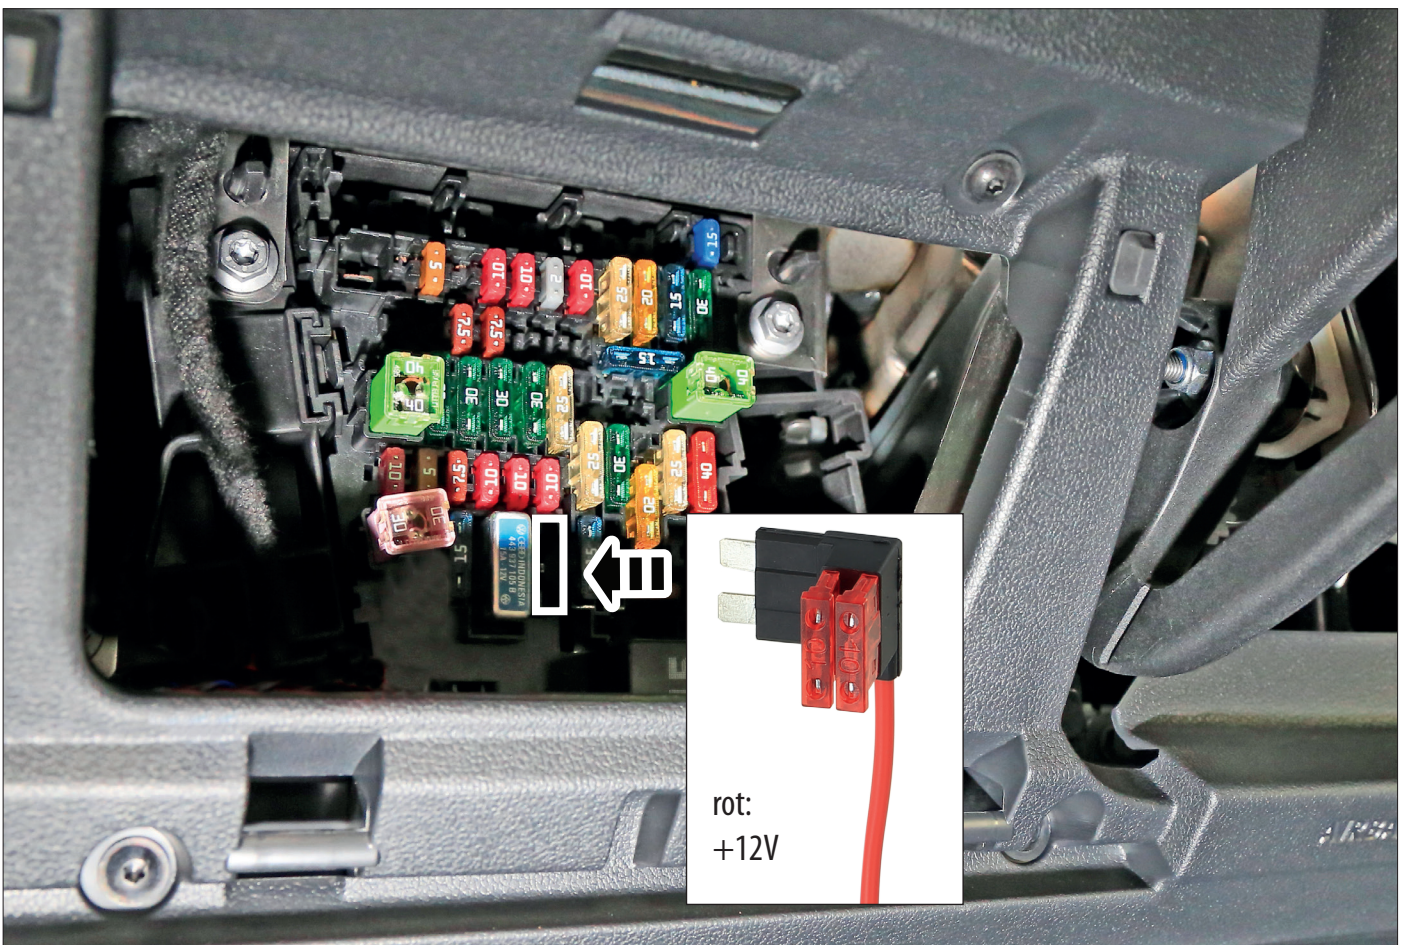

rot:
+12V

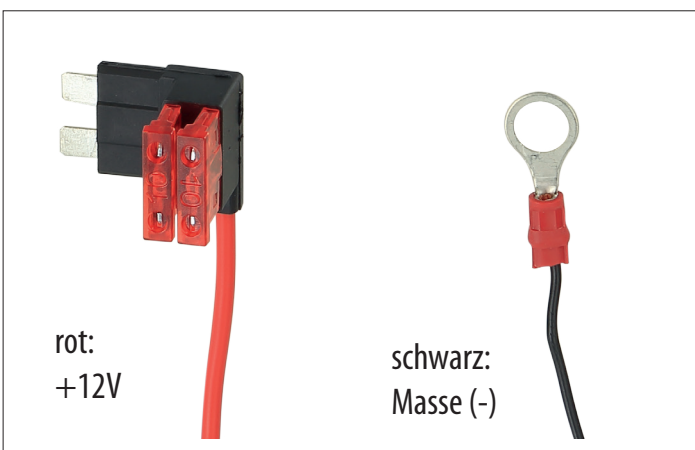

rot:
+12V

schwarz:
Masse (-)

- (8) Wählen sie eine passende Stelle im Fhz. zur Stromabnahme: Stecken sie das +12V Inbay-Kabel (rot) in den freien Steckplatz des Sicherungskastens (siehe Pfeil). Verbinden sie das schwarze Kabel mit der Fahrzeugmasse


- rot: +12V
- schwarz: Masse



- (9) Führen sie das Inbay® Stromkabel durch das Loch auf der Rückseite des OEM-Ablagefachs



- (10) Setzen sie das OEM-Ablagefach wieder ins Armaturenbrett ein. Stellen sie sicher, dass das Stromkabel bis zur im Bild gezeigten Stelle zeigt

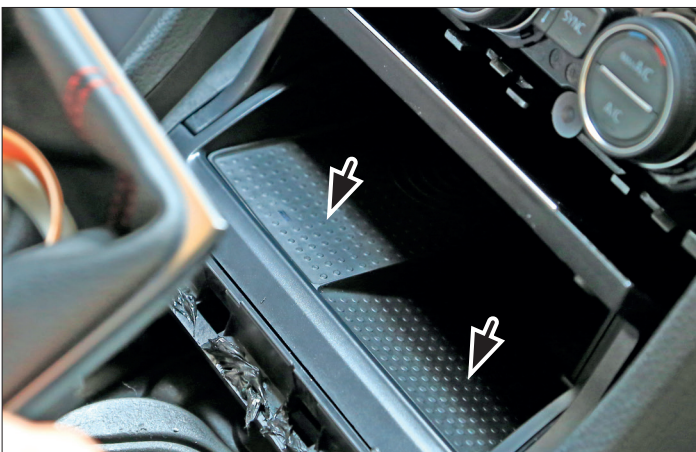

- (11) Setzen Sie den Inbay® -Einsatz in das Ablagefach




- (12) Bauen Sie alles in umgekehrter Reihenfolge wieder zusammen

Inbay® ist jetzt einsatzbereit zum drahtlosen Laden Qi-kompatibler Smartphones

(Weiterführende Informationen finden Sie in der beigelegten Inbay® Bedienungsanleitung)




(1) Remove panel (see arrows)

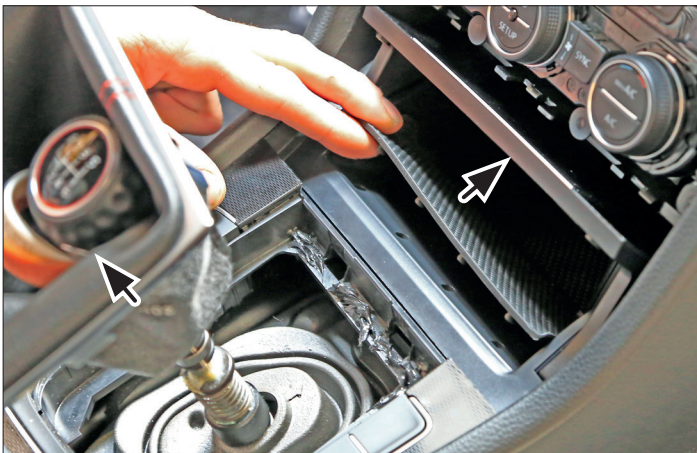

(2) Pull up gear lever cover

(3) Unclip and remove OEM rubber mat

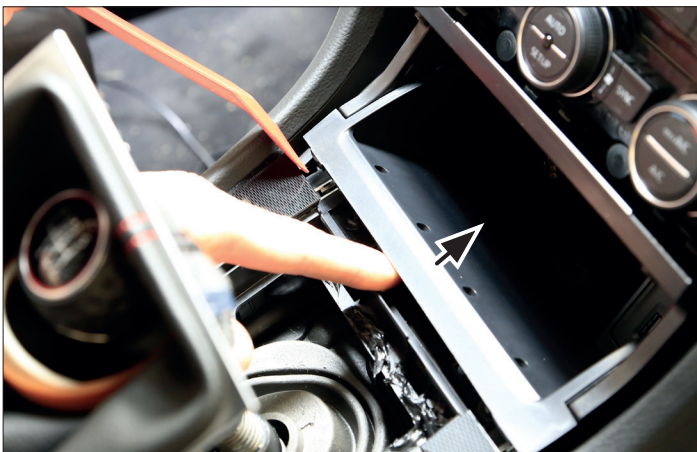

(4) Unclip OEM pocket and pull it towards your direction




(5) Unplug cables carefully

(6) Remove OEM pocket



- (7) Make a hole ($\varnothing = 10$ mm) in the right lower edge of the OEM pocket (seen from the rear side) to clear space for the Inbay® power cable

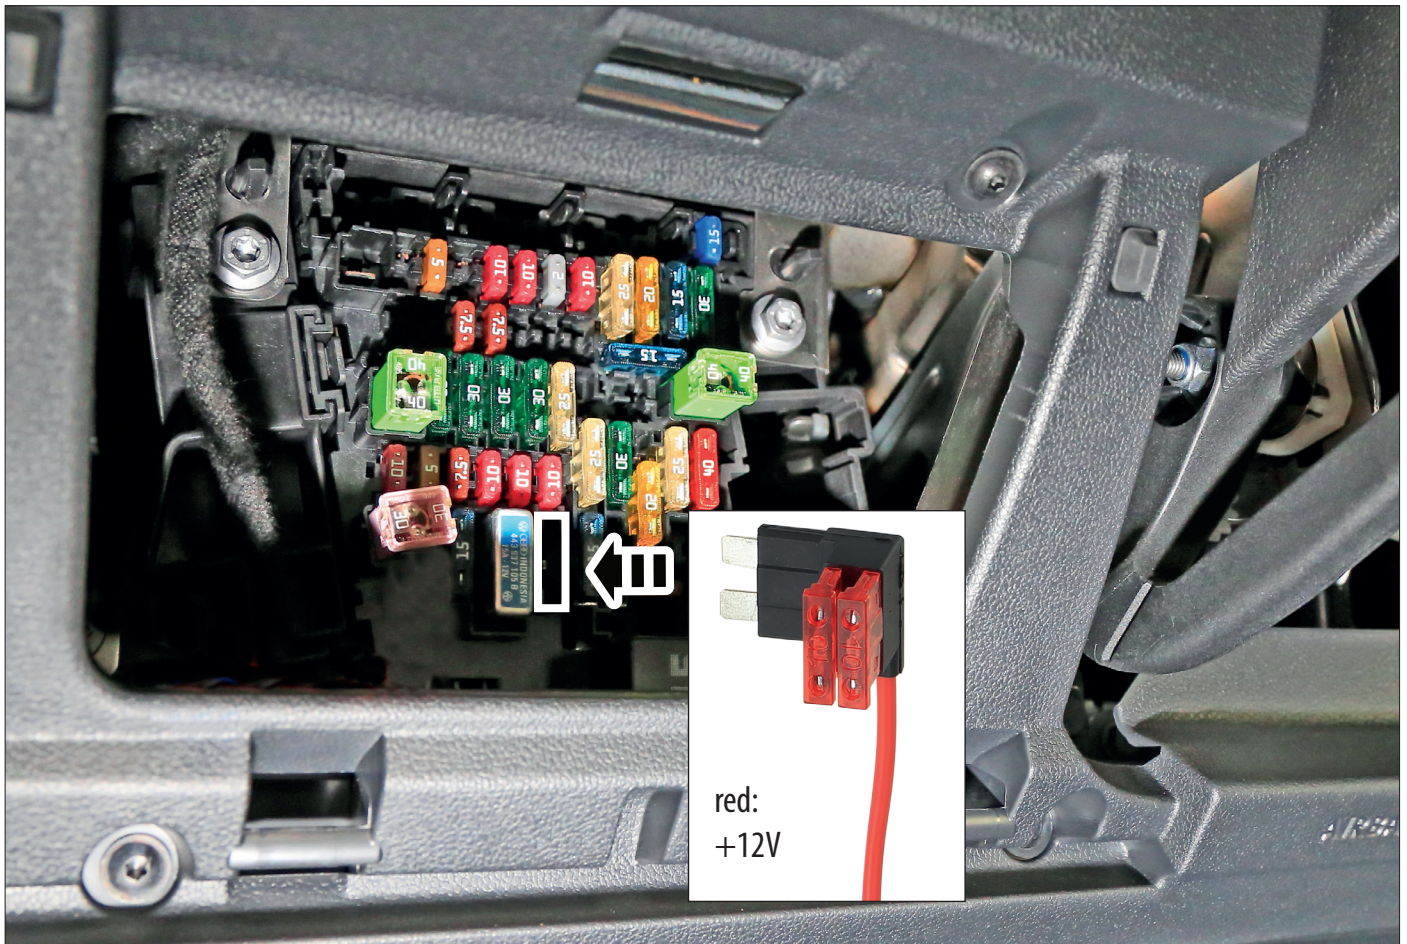

- (8) Choose an appropriate place for power supply: Plug the +12V Inbay cable (red) into the free slot in the fuse box (see arrow). Connect the black cable (ground) with the ground of the vehicle



- red: +12V
- black: ground



- (9) Lead Inbay® power cable trough the hole on the rear of the OEM pocket



- (10) Place OEM pocket back into the dash board
Make sure the cable for connecting the Inbay® PCB is placed like shown on the photo (see circle)

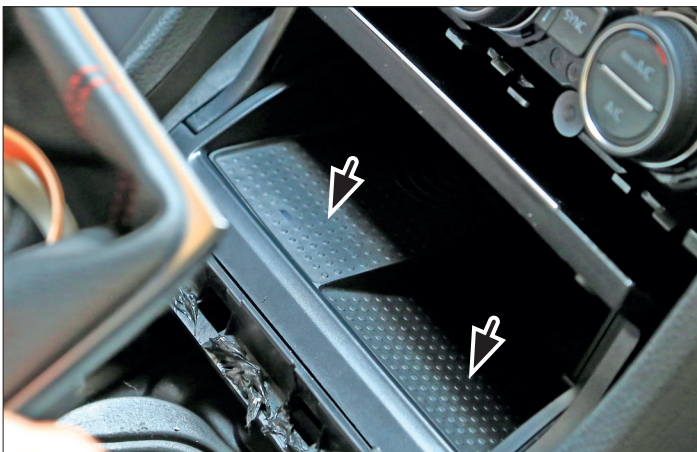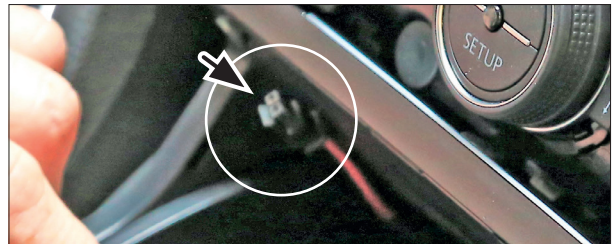

- (11) Put Inbay PCB / Rubber mat into OEM pocket



- (12) Reinstall everything in reverse order to finish installation

Inbay® can now be used to charge your Qi-compatible smartphone wireless

(see trouble shooting guide for further details)