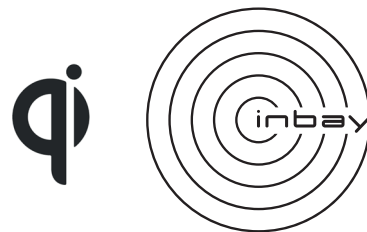
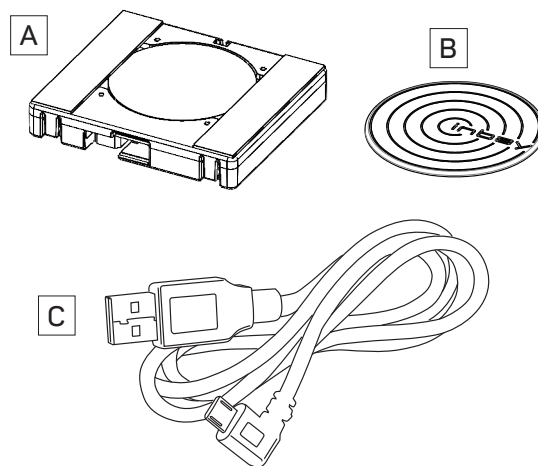


Universal Wireless Charging Kit 240000-04

**D** EINBAUANLEITUNG**GB** INSTALLATION INSTRUCTIONS**E** INSTRUCCIONES DE MONTAJE**F** INSTRUCTIONS DE MONTAGE**I** ISTRUZIONI DI MONTAGGIO**P** INSTRUÇÕES DE MONTAGEM**NL** INBOUW-INSTRUCTIE**DK** MONTERINGSVEJLEDNING**N** MONTERINGSVEILEDNING**S** MONTERINGSANVISNING**SF** ASENNUSOHJE**CZ** CZ NÁVOD K MONTÁŽI**H** BESZERELÉSI UTASÍTÁS**PL** PL INSTRUKCJA ZABUDOWY**RO** INTRUCȚIUNI DE MONTAJ

Expert Fitment Required

Montage durch Fachwerkstatt erforderlich

Montaje sólo por el concesionario

Montage par spécialiste nécessaire

E' necessario in officina specializzata

Especialista em montagem requerido

Motage door vakman nodig

Montage ved professionelt værksted påkrævet

Nødvendig med montering fra fagvevwerksted

Verkstadsmontage erfordras

Asennus tarpeen merkkikorjaamossa

Montáž ve specializované dílně nutná

A szereléshez szakmuhely kell

Konieczny montaz przez warsztat specjalistyczny

Montajul trebuie efectuat de un atelier de specialitate

Subject to alteration without notice

Technische Änderungen vorbehalten

Reservadas modificaciones técnicas

Sous réserve de modifications techniques

Con riserva di apportare modifiche tecniche

Reservamo nos o direito a alterações técnicas

Technische wijzigingen voorbehouden

Med forbehold for tekniske índringer

Tekniske forendringer forbeholdes

Med reservation för tekniska ändringar

Tekniset muutokset pidätetään


Technické zmeny vyhrazeny


A változtatások technika jogát fenntartjuk

Zmiany techniczne zastrzeżone


Ne rezervam dreptul la modificari tehnice

The "Qi" symbol is a trademark of the Wireless Power Consortium

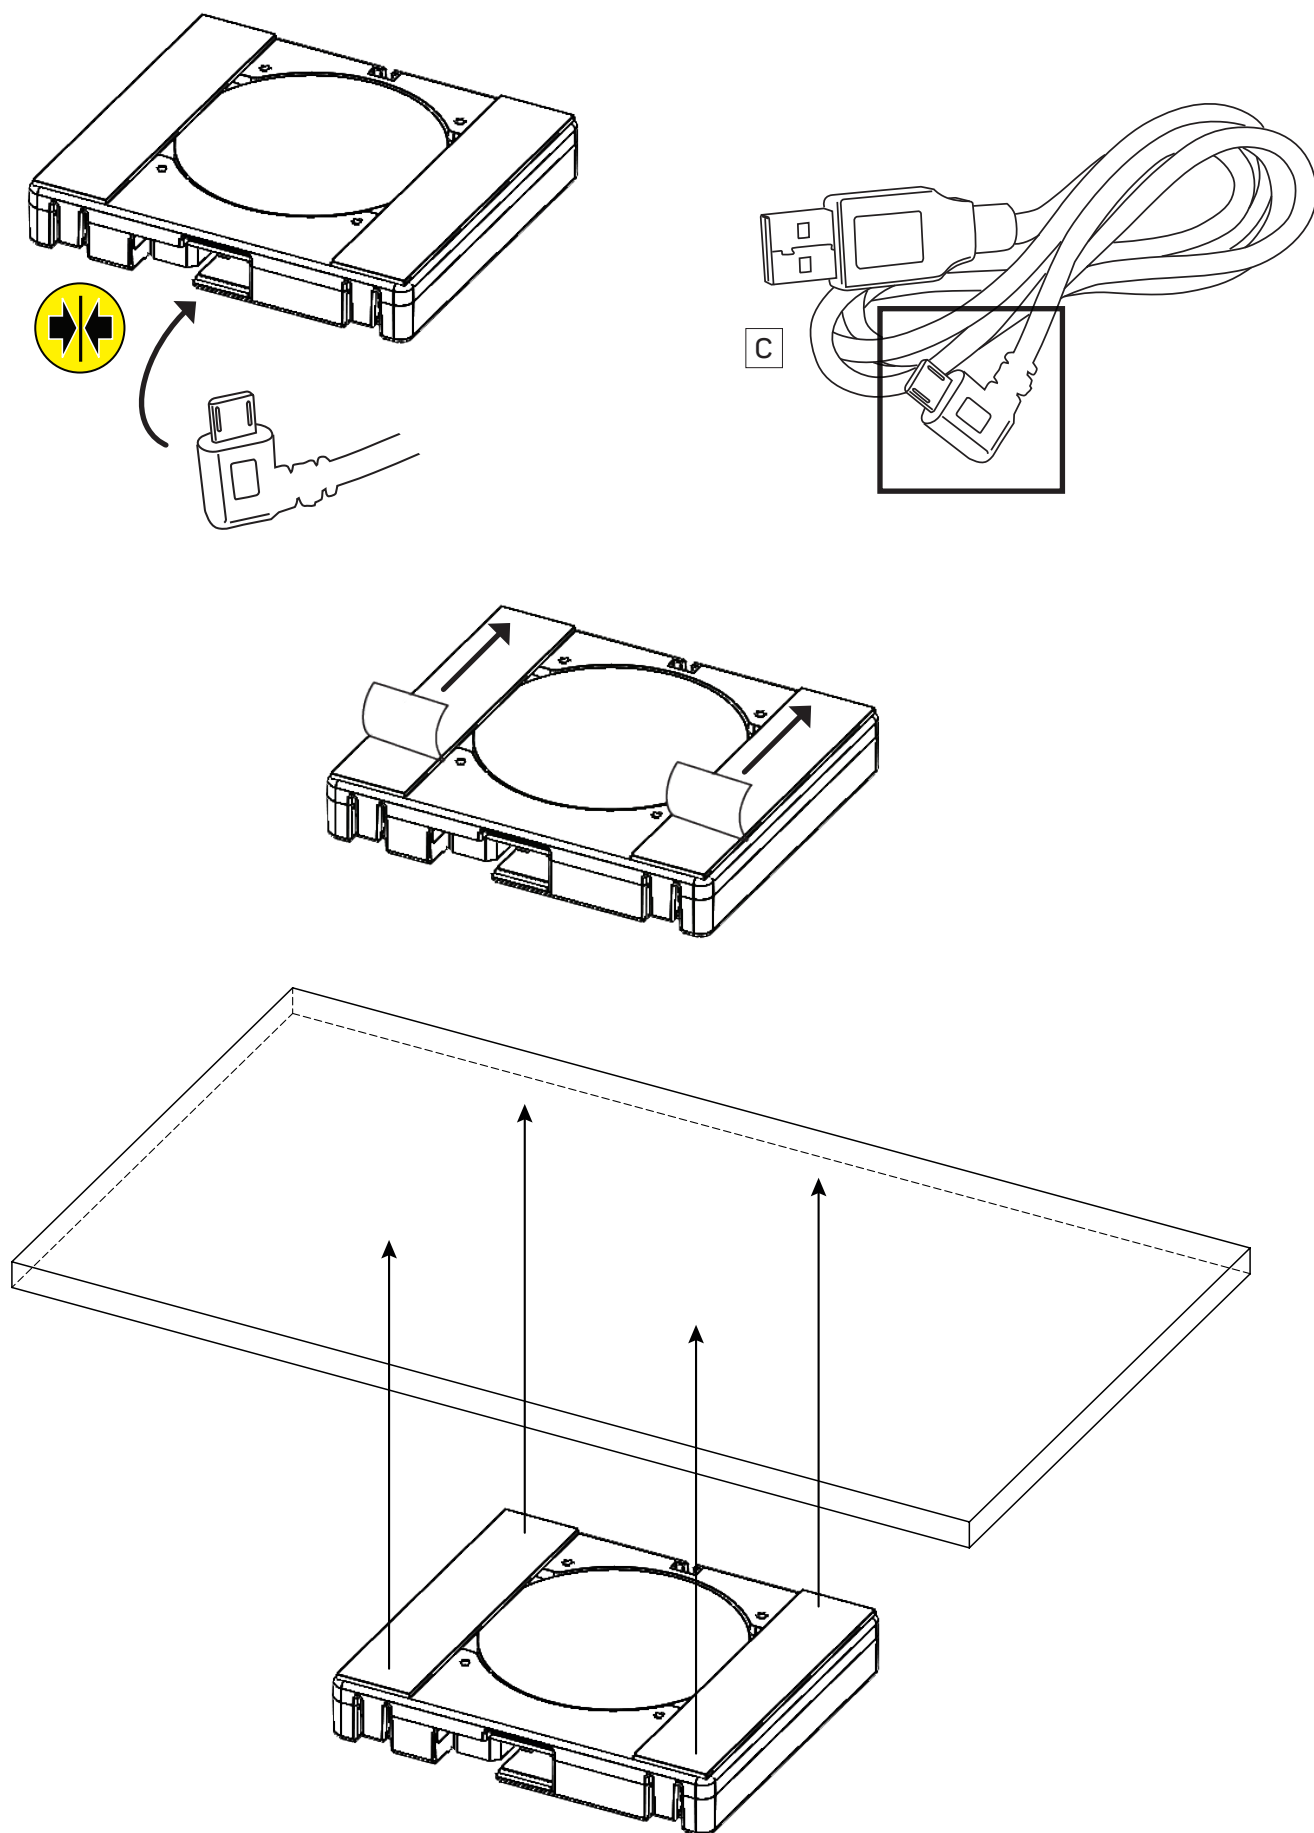

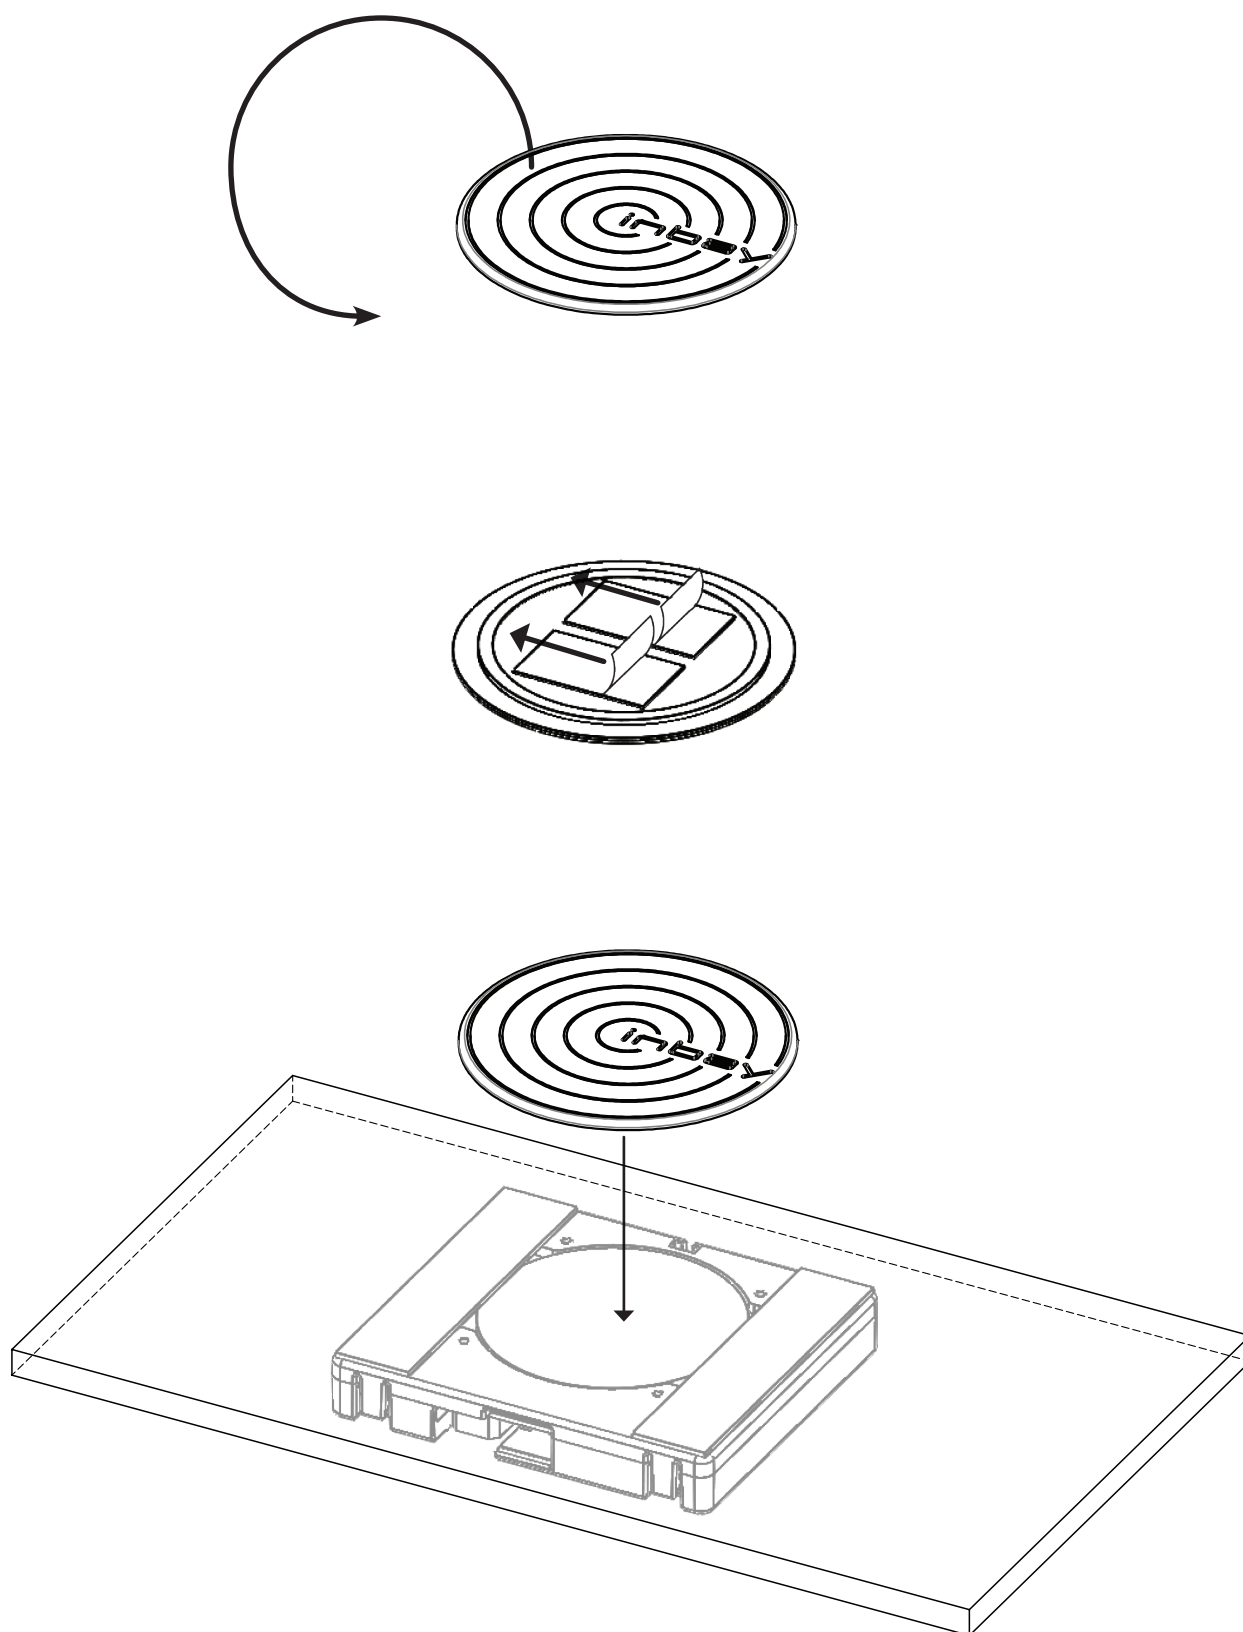

USB input

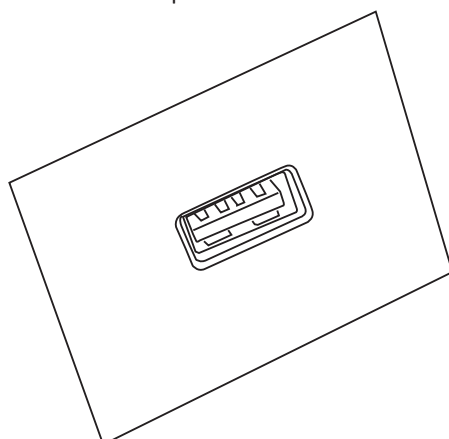

USB-Plug

